

1. POSITION OF TOUCH PANEL

(Be sure to adjust the touch panel after reconnecting the touch panel connector.)

STANDARD

The deviation between the liquid crystal display and touch panel should be within 1 mm when the touch panel is pressed.

ADJUSTMENT



1. While pressing the start/stop, reverse stitch and needle position buttons, turn on the power to display the screen for the touch panel adjustment mode.
2. While pressing the start/stop button, touch the touch panel at the positions marked by crosses (+) in order from 1 to 5.
(When touching the touch panel, use an object with a rounded tip such as a pencil or matchstick. Never use a hard or sharp-pointed object.)
If the buzzer sounds once when cross number 5 is touched, the adjustment has been made correctly.
If the buzzer sounds twice when cross number 5 is touched, an error has occurred. In this case, touch the crosses on the touch panel again in order from 1 to 5.
Never press the thread cutter button during this time. (Doing so may cause a malfunction.)
3. Turn the power off, then on again and check that the screen display and the touch panel positions are aligned.

Adjustment Point

If the buzzer sounds more than twice while making adjustment (2), perform the procedure again from the beginning since the position has not been correctly set.

Note

If the touch panel adjustment screen does not appear after the test mode [1] button is pressed, turn off the sewing machine. While holding down the start/stop, reverse stitch and needle position buttons, turn on the power, then press the test mode [1] button again.

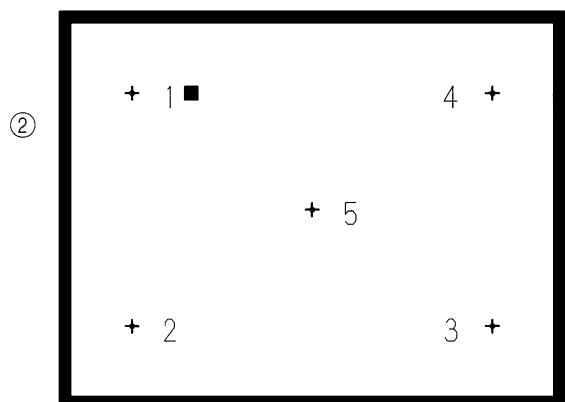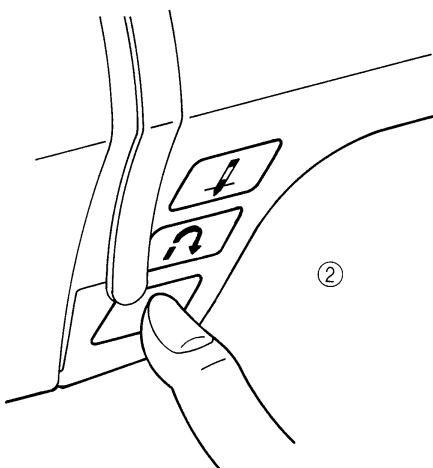

Touch panel adjustment screen