

User manual

Mistar floppy drive emulator FOR Chinese EMBROIDERY MACHINE

Features:

Use ordinary usb pen driver as the medium for transfer design.

Same size, same interface with floppy driver, easy to install.

Connect through floppy driver interface, no need to modify system settings.

Files in root directory can be searched.

Function:

Two button used as IN and OUT instruction. Press the IN button to transfer files from usb pen driver to built-in memory, When the total capacity of files in current directory exceed 1.44Mb/720Kb, press IN button again to transfer files into built-in memory, and the OUT button is used to transfer files from machine to usb pen driver.

Operation:

Read sequence:

Plug usb pen driver.

red lamp on, 1-20 seconds later, it off.

3.operate machine to read disk.

4.if total capacity of files in current directory exceed 1.44Mb, and file you need is not in current space, press IN, goto step 2.

Write sequence:

Plug usb pen driver

red lamp on, 1-20 seconds later, it off.

Press OUT, red lamp on. 4.operate machine to write disk.

after the machine display it finished, wait the green lamp off. 3 seconds later.

press OUT again, 1-20 seconds later, red lamp off.